


RHODE ISLAND RENTALS

401-738-9731

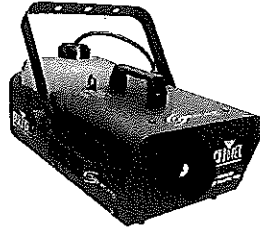


Operation

1. Plug in the fog machine to power and turn the power switch to the fixture on.
2. Plug in the timer remote to the Manual Controller socket on the rear of the fog machine.
3. Press the TIMER ON/OFF button on the timer remote. The LED above the button should light, indicating activation of function.
4. You may now set the INTERVAL & DURATION adjustment knobs to the desired position.

Note: The INTERVAL is the time in between bursts of fog.

Note: The DURATION is the time that the fog machine will run during the burst.

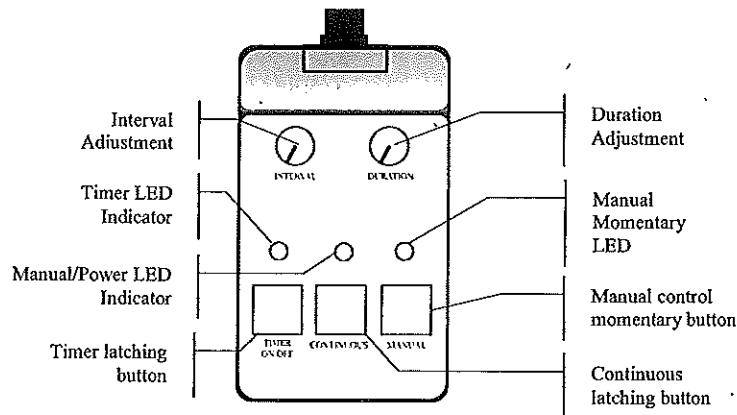

Caution:

1. Never place the fog/hazer machine on any flammable material (i.e. carpet, fabric etc.) during operation. All fog/hazer machines should always be on a non-flammable surface, such as concrete or tile.
2. Depending on the amount of fog/haze generated, all fog machines may set off smoke detectors.
3. Do not fill fog machine with any other liquid other than what was provided by Rhode Island Rentals. Other liquids will clog the machine. Customer will be Responsible for any damages.