



MOVIE SCREEN™ EASY SET-UP GUIDE




CONTENTS:

- 1 Airblown® Inflatable Frame
- 1 Movie Screen™
- 8 Tether Stakes
- 8 Base Stakes
- 8 Nylon Tethers (4 long, 4 short)
- 1 Spare Fuse
- 1 Storage Bag



1 Airblown® Inflatable Frame

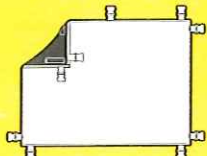

1 Movie Screen™



8 Tether Stakes (long)



8 Base Stakes (short)



4 Long Tethers




4 Short Tethers




1 Spare Fuse




1 Storage Bag

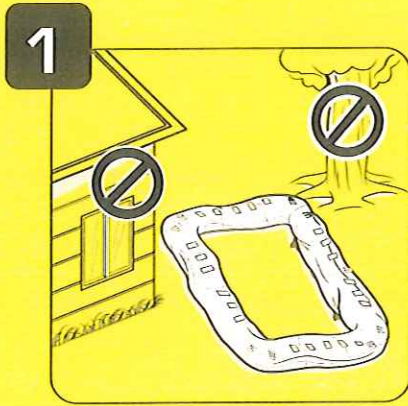

Remove contents from packaging and lay out deflated Airblown® Inflatable Movie Screen™ in a clear, flat area free of low overhangs such as trees, eaves or anything else that could puncture or damage your Airblown® Inflatable.

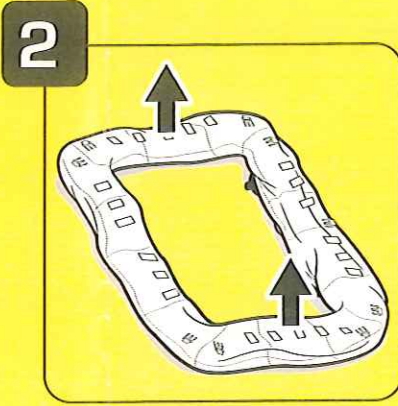


Ensure that your Airblown® Inflatable Frame is lying so that the side with the plastic clips and hook-and-loop patches is facing up.

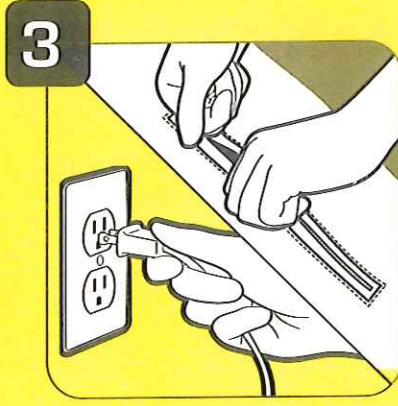


While item is still lying flat, plug power cord into receptacle or other outlet device to inflate your Airblown® Inflatable Movie Screen™. This process may take a few minutes. Make sure the air intake is clear of fabric or other obstruction and zipper is fully closed.




Attach Movie Screen™ to frame by connecting the 9 clips on the corners and middle of screen, and by securing hook-and-loop patches along the back edges of the Movie Screen™. Locate the four metal legs on the bottom of the frame and unfold them completely.

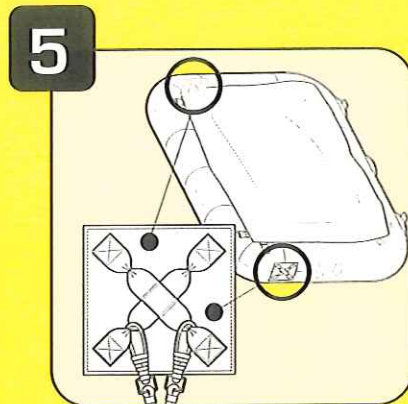


Tie ends of the 4 long nylon tethers to the upper "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

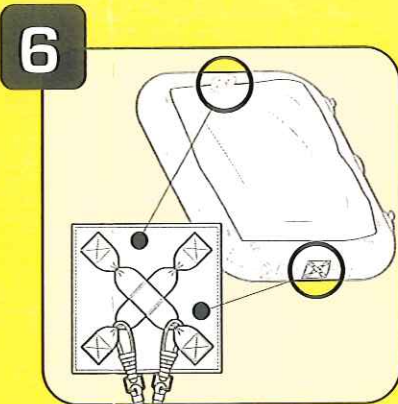

Tie ends of the 4 short nylon tethers to the lower "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

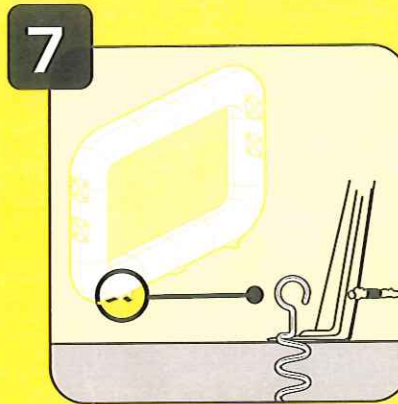

Stand the Airblown® Inflatable Movie Screen™ upright, ensuring that fans are located on the bottom. Locate the 8 small Base Stakes and screw them into the ground through the provided hole in each leg of the stands.

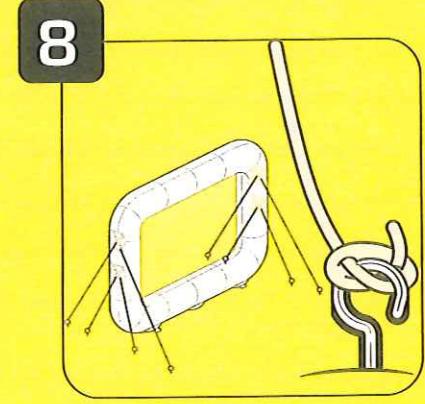

Insert the 8 tether stakes into ground and attach clips from nylon tethers to stakes, as shown.



MOVIE SCREEN™ Frequently Asked Questions (FAQ's)



Note: ONCE FAN IS UNPLUGGED AND STOPS BLOWING, YOUR Airblown® Inflatable Movie Screen™ WILL DEFLATE.

1. What are the ideal conditions to use my Airblown® Inflatable Movie Screen™?

The Airblown® Inflatable Movie Screen™ is designed for nighttime viewing. The brightness of your image will vary with the type of projector you use. We recommend you set up your Movie Screen™ in as dark of an area as possible (away from street lights and porch lights), and refer to your projector's instruction manual for ideal projector placement.

2. What happens if my Airblown® Inflatable Movie Screen™ becomes torn?

Rips in the Airblown® Inflatable Movie Screen™ can be sewn by hand (no special thread is required) or taped with clear packing tape. Note: if the screen itself becomes torn, it is recommended that it be sewn or taped on the backside to reduce visible damages and reflection from projectors.

3. How can I clean my Airblown® Inflatable Movie Screen™?

Wipe clean with a damp cloth and allow to dry before storing away. Use mild detergent if necessary.

4. When I unplug my Airblown® Inflatable Movie Screen™, it deflates. Why is this?

Your Airblown® Inflatable Movie Screen™ will not stay inflated unless it is plugged in and the fan is blowing air.

5. How much electricity does an Airblown® Inflatable Movie Screen™ consume?

It uses about as much energy as a few standard strings of Holiday Lights.

6. What is the best way to store my Movie Screen™?

Store and keep in a cool, dry location.

7. My area is prone to unusually windy conditions, will this affect my Movie Screen™?

In order to prevent damage, we suggest you keep the Movie Screen™ protected from high winds.

8. My Movie Screen™ fully-inflates, but will not stand up properly. What can I do?

Please reference the General Instructions section of this manual for step-by-step instructions and illustrations on how to properly stake and secure your Movie Screen™ so that it will be correctly displayed.

9. There are wrinkles in my Movie Screen™. What should I do?

We recommend that either you allow your screen to hang up, or that you simply inflate your Airblown® Inflatable Movie Screen™ for a period of time before projecting images onto the screen. Any wrinkles should fall out naturally after a short while.

10. The screen is wrinkled - will this affect the quality of the picture?

Some wrinkling may occur as a result of folding your screen. However, the wrinkles will NOT affect the image on the screen as they are not noticeable in darker environments. Make sure the screen is firmly attached to all of the hook-and-loop fasteners on the frame as this will allow for a more even surface for the projection.