

## Cotton Candy Machine Instructions

The Cotton Candy Machine has a standard 3-prong plug and requires a standard 3 prong outlet. (15 amp, 120 volt, 60 cycle standard wall receptacle. Max amp draw for the unit at 120 volts is 9 amperes).

### Before Plugging in the Machine

- \* Place the machine on a flat level table. Place the large aluminum bowl on the machine base. The bowl sits on the machine, there are no fasteners.
- \* Make sure MAIN AND HEAT SWITCHES are in the OFF position.
- \* Plug in the machine.

### Operating the Machine

- \* With the main switch OFF, fill the floss head 90% full. Always fill it 90% full with SUGAR. DO NOT OVERFILL - or excessive vibration will occur.
  - \* IMPORTANT: ALWAYS TURN MACHINE OFF BEFORE ADDING SUGAR.
  - \* Turn MAIN SWITCH and HEAT SWITCH "ON."
  - \* Turn heat control knob (If equipped) clockwise to maximum setting to initiate the fastest possible warm up and machine should start making floss in a few seconds.
  - \* When the unit starts making floss, reduce the heat setting.
- NOTE: If you smell burning sugar, reduce the heat.
- \* Some models are automatic heat controlled.

### Making Floss

1. Pick a cone by the pointed end. *Figure 1.*
2. Hold an inch or two of the pointed end of the cone between two fingers and a thumb. *Figure 2.*
3. With a light flicking action, roll cone into the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. DO NOT roll floss while the cone is inside the pan. *Figures 3 & 4.*
4. During operation, the floss will collect on the mesh stabilizer inside the bowl. NOTE: If the floss collects "low" on the stabilizer, twist the front (leading) edge of the leather floaters down. *Figure 5.* You get more lift and the floss will collect higher.

### Shut Down

1. When completing operation for the day (or any prolonged period), run all the sugar out of the floss head.
2. When empty, turn the heat to highest position (If equipped) for approximately one minute to "clean" (bake) off remaining sugar. NEVER put water in the floss head.
3. Turn HEAT switch to OFF position.
4. Turn MAIN switch to OFF position and UNPLUG MACHINE.
5. Wipe the body of the machine with a damp cloth to dissolve any sugar that may have collected on it. Wipe dry. Do not put water in the floss head.

For additional information on making great cotton candy, view this tutorial video. And enjoy!

[http://www.gmpopcorn.com/tutorial-videos/wmv/Cotton\\_Candy\\_Machine.wmv](http://www.gmpopcorn.com/tutorial-videos/wmv/Cotton_Candy_Machine.wmv)

### SPINNING FLOSS HEAD - KEEP HANDS CLEAR



MODELS MAY VARY



Figure 1



Figure 2



Figure 3

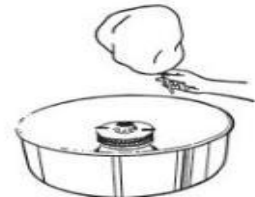


Figure 4

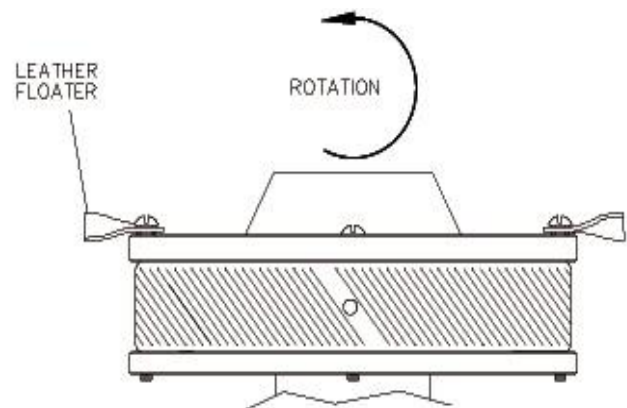


Figure 5