

RHODE ISLAND RENTALS

HOT DOG MACHINE

- STEP #1** PLACE HOT DOGS IN MACHINE – DISTRIBUTE EVENLY.
- STEP #2** TURN SWITCH ON. TURN HEAT DIAL TO HIGH FOR ½ HR.
- STEP #3** TURN HEAT DIAL TO MEDIUM (#4) & LET COOK FOR ½ HR.
- STEP #4** TURN HEAT DIAL TO LOWER SETTING TO KEEP WARM.

NEEDED FOR UNIT USE:

15 AMP DEDICATED LINE